



Tablet Computer 799



User's Manual

Before operating this unit,
please read this manual thoroughly
and retain it for future reference.


GB

Table of Contents

1. Description of Appearance	3
2. Getting Started	4
2.1 Battery Charging	4
2.2 Use of Memory Card	4
2.3 Hot Swapping Between Memory Card and External USB Flash Disk	5
2.4 Storage Space	6
2.5 ON OFF	6
2.6 Interface Rotation	6
2.7 Network Connection	7
3. Input Operations	7
3.1 Keyboard	7
3.2 Touch Screen	7
3.3 Mouse	8
4. Desktop	8
4.1 Status Bar	8
4.2 Main Interface	8
4.3 Shortcut	10
4.4 Shortcut with Small Tools	10
4.5 Use of Desktop Small Tools	11
5. Web Surfing	12
6. Typical Applications Introduction	12
6.1 Email	12
6.2 File Browsing	13
6.3 Multimedia Library	13
6.4 Music Player	15
6.5 Video Player	16
6.6 Calendar	17
6.7 Calculator	19
6.9 Clock	20
7. Other Applications	21
7.1 Camera	21
7.2 APK Manager	22
7.3 SlideME Market	23

8. Tips and Skills	24
8.1 Some Convenient Operating Ways	24
8.2 Wireless Internet Connection	24
8.3 Tips to Save Power	25
9. Personalized Settings	26
9.1 Wireless and Network	26
9.2 Sound	26
9.3 Display	27
9.4 Location & Security	28
9.5 Application	28
9.6 SD Card & Device Storage	29
9.7 Language & Keyboard	31
9.8 Date & Time	32
9.9 Screen Calibration	32
9.10 About Device	32
10. The use of HDMI	34
11. Lock of Tablet Computer	34
12. Troubleshooting	35
12.1 Close Application	35
12.2 Forced Shutdown	36
12.3 Restore Defaults	36

 1. Description of Appearance

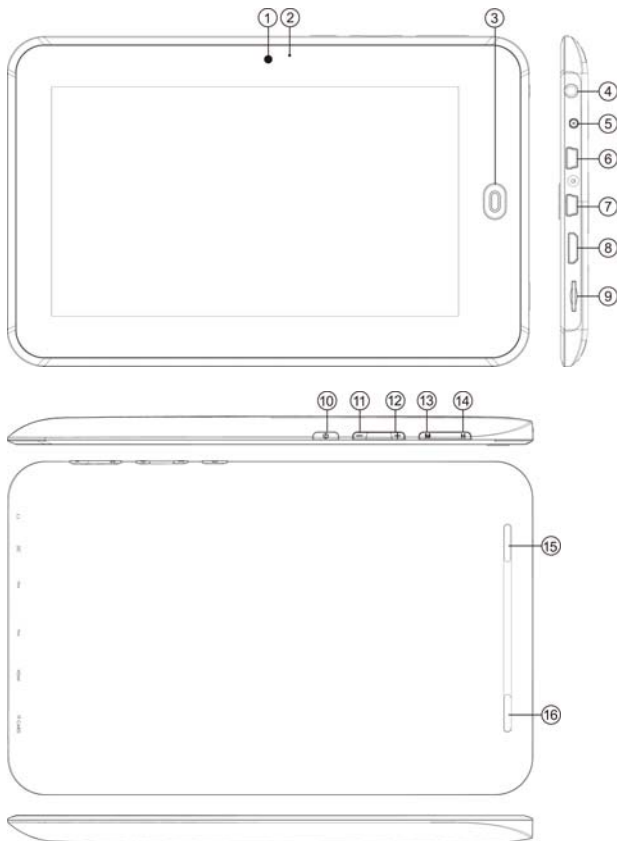

1	Camera	9	microSD card slot
2	MIC	10	POWER key
3	Return key	11	VOL-
4	Earphone jack	12	VOL+
5	DC IN	13	MENU key
6	USB port	14	HOME key
7	USB port	15	Speaker
8	HDMI port	16	Speaker

2. Getting Started

2.1 Battery Charging

This tablet computer is equipped with a built-in Lithium-Polymer battery. System will suggest to charge when the battery is low.

Power Adapter

Connect one end of the power adapter to a socket and the other end to the DC IN jack of the device to charge the device.

NOTE We strongly recommended using the power adapter that came with the tablet computer to avoid damage to the machine.

Charging Methods

1. Plug the power adapter, the charging indicator will turn red to show that the charging is in process. When the battery is full, the charging indicator goes out.
2. You can still use tablet computer during charging.

2.2 Use of Memory Card

Insert Memory Card

Insert the memory card into the card slot and press it into the card slot until a click sound is heard. A prompt will appear on the top left corner of the screen which says: Preparing memory device.

Browse the Documents in the Memory Card

Run "My Pad" program. Display all files under the root directory and select "SD1" to open it to browse the content in the card.

Pull out Memory Card

Close all the files opened from the card: click menu, select settings → Storage → SD card 1 → Unmount SD card 1. The system will prompt that "memory device safe to remove". Gently press the card and part of the memory card will pop out. When the memory card has been removed, "Removed memory device" will be prompted on the top left corner of the screen.

NOTE

1. The memory card should be inserted correctly; otherwise it may be damaged;
2. Please do not forcibly pull out the card before the appearance of the prompt that "remove the memory card", lest that the card will be damaged;
3. Memory cards of main brands are suggested to be used to avoid the incompatibility of the card.

2.3 Hot Swapping Between Memory Card and External USB Flash Disk

Please do not carry out hot swapping when using or browsing files in memory card and external USB flash disk. Directly pull out memory card or external USB flash disk when browsing or using files in them in My Video, My Music, My Album and other software may damage the memory card and USB flash disk and they may automatically exit process for self-protection. Please refer to "2.2 Use of memory card" on insert and extract of memory card. Please close all files being used in the external USB flash disk before pulling it out.

2.4 Storage Space

The device has three storage spaces: internal storage of the device, USB flash disk or memory card. Internal storage of the device is not displayed; the displayed folder name of memory card is "SD1"; the displayed folder name of external USB flash disk is "Udisk1". System storage area can only be used for storing system files. The total internal storage space of the device is 4 GB. The storage space of USB flash disk and memory card is determined by their specific capacity.

Please refer to "9.6 SD card and Device Storage" for related specific information on storage.

2.5 ON OFF

1. **Starting Up:** When the battery has sufficient electricity, long press the power key for **2 seconds** to start up. Screen lock will be entered after starting up. Slide unlock icon upward to enter main interface; (slide it downward to turn off sound and slide it downward again to turn on sound).
2. **Shutdown:** Press the power key (4 seconds) and the system will pop up shutdown confirmation interface. Slide the following shutdown icon upward to shut down, while slide the above shutdown cancel icon downward to return to the shutdown interface.
3. **Screen Lock:** Press the power key (1 second), the system will be locked and LCD will be off. Press the power key again can wake up the system.

2.6 Interface Rotation

The system interface can automatically rotate screen according to the direction of the device. The system interface will be displayed by vertical screen when hold endwise, while by horizontal screen when hold widthwise. The rotation time of the screen is within 2 seconds. Refresh the screen to make it return to normal state after switch.

2.7 Network Connection

Wireless Network

1. Select "settings" icon under the shortcut bar of the desktop.
2. Select "wireless network" in the Settings menu .
3. Select check box behind Wi-Fi to Enable Wi-Fi.
4. Select "Wi-Fi setting" option to set Wi-Fi network.
5. All the AP devices can be found will be listed. Click the AP to be connected in the options.
6. If the AP was successfully connected before, the information will be stored. Select "connection" in the window popping up to start connection, while select "forget" to eliminate AP information.
7. If the AP is not encrypted, select "connection" in the window popping up to start the connection.
8. If the AP is encrypted, input password in the window popping up and click "connection" to start connection.
9. When the network is successfully connected, Wi-Fi icon will appear on the status bar on the top of the desktop.

3. Input Operations

3.1 Keyboard

When you use procedures or files that need to input text or numbers, the touch keyboard will automatically appear on the screen.

NOTE This device supports external USB keyboard, but when using an external USB keyboard, some keys may not be normally used.

3.2 Touch Screen

Touch screen can induct moving track of fingers, which can carry out the following operation:

Click: Select an icon and click it to select the icon or option needed

Long Press: Select an icon and long press it to select the icon and it can be dragged to the quick bar at the bottom of the desktop to display .

Drag: Drag icons on the desktop to move them among different

pages in the module interface. Application icons also can be dragged to quick bar.

Touch pen can be used to replace fingers during the process of using the touch screen.

NOTE Please do not place objects on the surface of the touch screen, which may scratch or crush it.

3.3 Mouse

The device supports external USB mouse. Insert USB mouse to carry out functions of click, selection, dragging, sliding and popping up menus by right click.

 
4. Desktop


4.1 Status Bar


The status bar is on the top of the screen. It has one software button on the left and five on the right. They are desktop button, refresh button, screenshots button, volume increase or decrease button, menu button, back button. The status bar also shows signal strength of Wi-Fi, battery status, time and other system information.


4.2 Main Interface

The tablet computer main interface procedure page includes two modes: desktop small tool mode and application icon mode. The two modes can be switched by the central shortcut button. The interface of the desktop small tool mode is showed as the following figure:

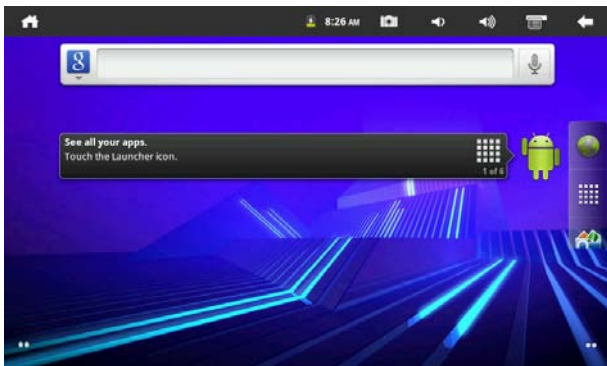

 
Click  on the quick bar to enter application icon mode interface. Application icon mode interface is showed as the following figure:

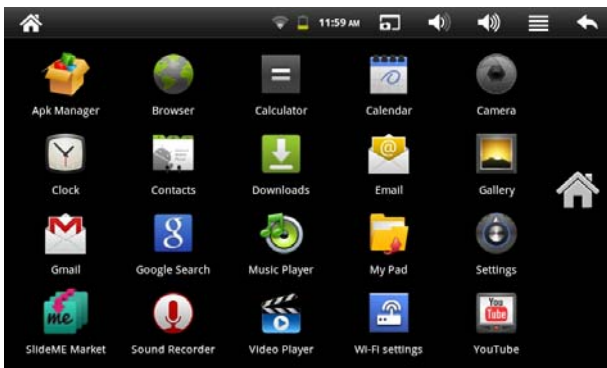

Click  to enter desktop small tool mode interface.

4.3 Shortcut

 
In desktop small tool mode interface, press menu button or click menu chart  on the top of the status bar. Shortcut menu will pop up on the bottom of the screen. The Menu items includes: add widget, wallpaper, search, notifications, desktop settings and system settings. It is showed as the following figure:



4.4 Shortcut with Small Tools

Widget

If you want to add a widget to the main screen, in desktop small tool mode interface, please press menu - add - widgets, and choose a widget to add to the main screen. Click the shortcut icon on the main screen to carry out corresponding shortcut operation.

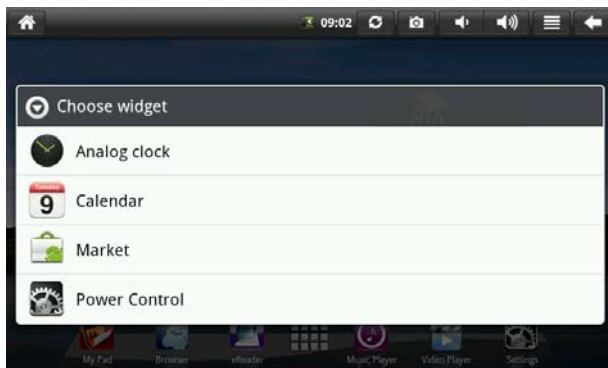

4.5 Use of Desktop Small Tools

Users can add, delete and install widgets, or to add, delete or change the position of application icons. Drag icons within the working area or between the working area and the quick bar, add or delete icons etc.

In desktop small tool mode interface, long press the small tool icon. A small check box will pop up on the interface, and the Recycle icon will pop up in the centre of the quick bar. The icon can be dragged to any position of the desktop and also can be dragged to the litter bin to be deleted.

5. Web Surfing

Users can access to Internet by the connection of the browser.



Click the browser icon on the desktop to open web browser. The following interface pops up when web page is opened:



6. Typical Applications Introduction

6.1 Email



Click email icon to enter Email. The following operation can be carried out:

 
1. Set up new e-mail account.
2. Set up new e-mail.
3. Receive and send e-mails.
4. Download or open attachments.

TIP Short cut menu will pop up by pressing menu button.

6.2 File Browsing



Click the file browsing icon **My Pad** to enter file browsing interface.

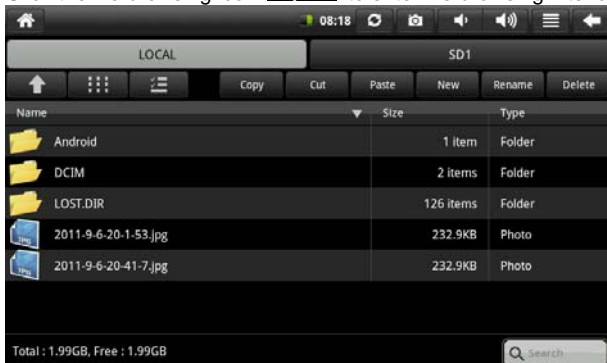

Click to enter browsing interface to carry out copy, cut, paste, new, rename, delete and other operations on LOCAL, SD1 and UDisk1.

Files Installation:


To install software in the file browser, you only need to click the installation file, the extension name of which is .apk. The installation prompts will popup. Select installation to install the software to the device.

6.3 Multimedia Library



Click the multimedia library icon **Gallery** to enter multimedia library interface, the interface is showed as following:



1. After entering gallery, click  in the top right corner of the screen to enter photo and video mode.
2. Click the menu button to pop up shortcut menu, which includes options of slideshow, multi-choice and Settings.



3. Click slideshow to enter slideshow mode.
4. Click Settings to enter setting interface.
5. Click thumbnails of pictures in gallery interface to enter full screen mode. Click the screen and magnified icon and miniature icon will pop up for magnified and miniature operation. Press the menu button and the shortcut menu will pop up for the following operation, such as sharing pictures, deleting pictures, building pictures, setting pictures as wallpapers or contact icon and more options. Click more to read detailed information of pictures, display pictures on maps, carry out slideshow and other operations.

6.4 Music Player

 




Music Player

Click the icon to enter music player.

Click the menu to pop up the following shortcut menu. Media Base can be selected: Music, My Favorite, and My List.

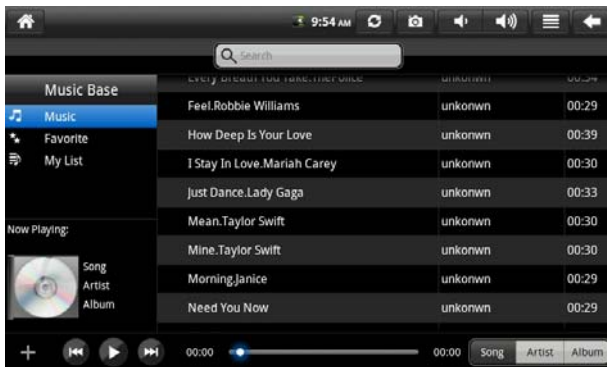Choose a song to enter playback interface.



1. Click the icon  to enter shuffle mode.
2. Click the icon  to switch between all repeat mode and single play mode.

6.5 Video Player



Click the icon **Video Player** to enter video interface. Media Base can be selected: Movies, Favorites, History. The interface is showed as following:



1. Choose a video file to play.

 


2. Click the icon to check the list. The interface is showed as following:




6.6 Calendar



Click the calendar icon  to check date and time, add memorandum and do other operation. The calendar can be used only after being set. The specific operation is as following:

 1. Connect the device to network, and then open the calendar. A dialog box that shows add an Exchange account will pop up. Input e-mail address and password, then click Next.

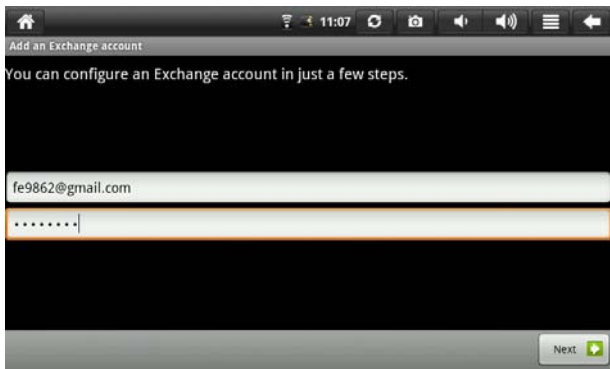


2. Click "Next" to continue.
3. The interface will automatically exit and return to the main interface after setting. Click to enter calendar to carry out date, memorandum and other operations. (Note: the e-mail address set for the first time can not be deleted; while the email address set for the second time can be deleted. Email address only can be added. Remove the email address just by restoring the factory default)
4. Click the menu button to pop up the following shortcut menu, corresponding operations can be carried out for day, week, month, agenda, today, more and so on. The interface is shown as following:



6.7 Calculator



 Click the icon **Calculator** to carry out calculation. It is showed as the following figure:

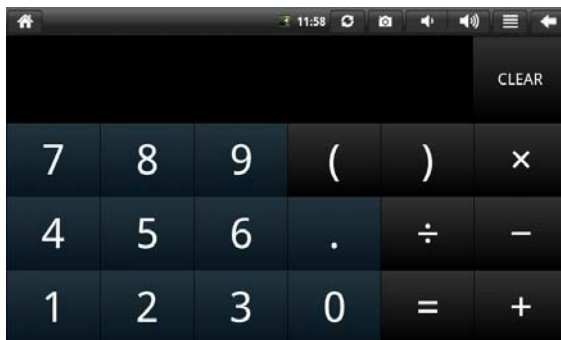




6.8 Voice Recorder



Click the icon **Sound Recorder** to enter audio interface.



1. Click the icon  to start the recording.
2. Click the icon  to stop recording. A prompt that asks for your confirmation to carry on the recording or give up will pop up.
3. Click the icon  to listen to the latest recording file.

6.9 Clock



Click the icon **Clock** to enter desk clock interface, which has alarm clock, photo browsing, music play, exit and other functions. Corresponding functions can be operated. It is showed as the following figure:



7. Other Applications

7.1 Camera



Click the icon  to enter photo mode interface of the camera. The operation will show as following:

1. Click the icon on the bottom right corner to take photos. Photos can be stored in DCIM/CAMERA under the root directory of disk of LOCAL.
2. Remove the slider on the right icon upward to switch to photo mode to video mode.
3. Click the icon on the top right corner to check the last photo taken. Slideshow, delete, share, clip, rotating photos to left and right side, setting as wallpaper or contact icon can be operated on the photo. Click the finish bottom to return camera interface.

7.2 APK Manager



Pre-installed software in the APK manager **Apk Manager** can not be displayed. The APK manager can install or uninstall APK in the memory card. Uninstall, install, select, scan path, exit and other functions can be operated. The interface is showed as following:



7.3 SlideME Market

The SlideME market has many applications that you can quickly and easily download to your Tablet.

Download Applications



1. Tap the **SlideME Market** application icon.

NOTE For the first time of use, the SlideME only can be used with network connection, and Application End User Agreement needs to be agreed before you use the SlideME market.

2. You can select applications from the default featured group, by Categories, Top Apps, Latest, or search by Application name.
3. Tap on an application, → Download.
4. After the app is downloaded, tap Install.
5. Tap Open to launch now, or Done to return to the SlideME Market screen.

App Market Function Menu

Tap  to display the App Market Function Menu.

Top Apps: List the top Apps in SlideME Market.

Latest: List the Latest updated Apps in SlideME Market

Notifications: View Apps which you are downloading and downloaded, if there is any version update for your installed Apps in Tablet, you will get the notification to prompt you update them.


Search: Search the Apps by name.


 
Refresh: refresh the Apps in SlideME Market.

More: Enter more settings of SlideME Market.

8. Tips and Skills

8.1 Some Convenient Operating Ways

 
Return to home screen – click 

Adjust volume – click  / 

8.2 Wireless Internet Connection



Click the wireless internet connection icon **Wi-Fi settings** to enter wireless internet connection interface. The interface is showed as following:

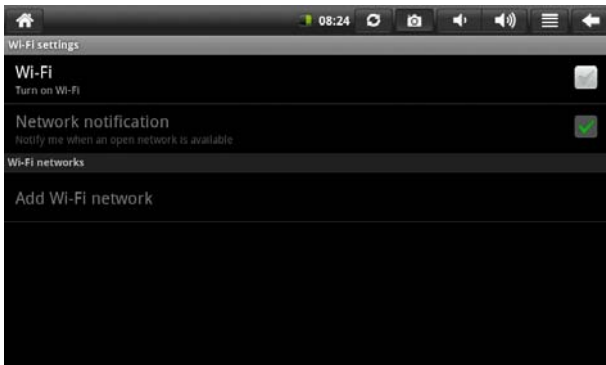

After inputting user name and password, click “connect” to connect to wireless network.

8.3 Tips to Save Power

To extend the battery life, please reduce the operating frequency of the following functions:

1. Watch movies, listen to music or take photos.
2. Display brightness: please press menu button - settings - sound and display (display settings) - brightness (turn down brightness).
3. Network search: please press menu button - settings - wireless network - connect to wireless - Wi-Fi settings - network notification.

9. Personalized Settings



 
Click desktop settings **Settings** on the shortcut menu to carry out personalized settings.

9.1 Wireless and Network

1. To start using Wi-Fi, please press menu button - system settings - wireless and network - selected check box behind Wi-Fi.
2. To set and manage wireless access point, please press menu button - system settings - wireless and network - Wi-Fi settings
Please refer to 8.2 Wireless Internet Connection in convenient settings for specific information.

9.2 Sound

Set ringtone, notification and Audible selection:

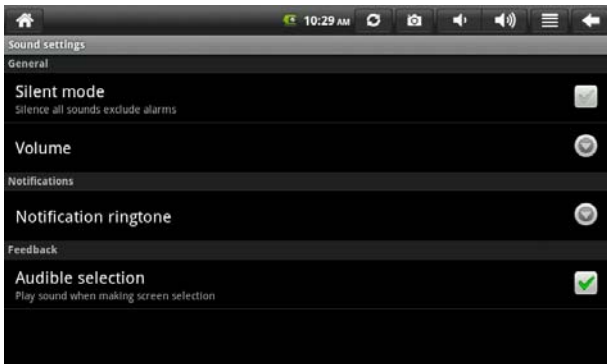

Silent Mode

To mute the sound except the media and alarm clock, press menu button - system settings - sound (sound settings) - silent mode.

Volume

To set volume of music and video, press menu button - system settings - sound (sound settings) - volume.

Notification Ringtone

To set notification ringtone, press menu button - system settings - sound (sound settings) - notification ringtone.

Audible Selection

To make sounds while screen selection, press menu button - system settings - sound (sound settings) - tactile feedback.

9.3 Display

Automatic Screen Rotation

Press menu button – settings - display (display settings) - automatic screen rotation to set automatic change of display direction. If the check box behind the direction is checked, rotary interface of the device will automatically follow to rotate.

Animation

To display all or part of the animations on windows, press menu button - system settings - display (display settings) – animation.

Brightness

To adjust the screen brightness, press menu button - system settings - display (display settings) – brightness.

 
Screen Standby

To adjust the delay before the automatic locking of the screen, press menu button - system settings - display (display settings) - screen standby.

9.4 Location & Security

Use Wireless Network

To use wireless network to check location in applications, please press menu button - system settings - location & security - use wireless network.

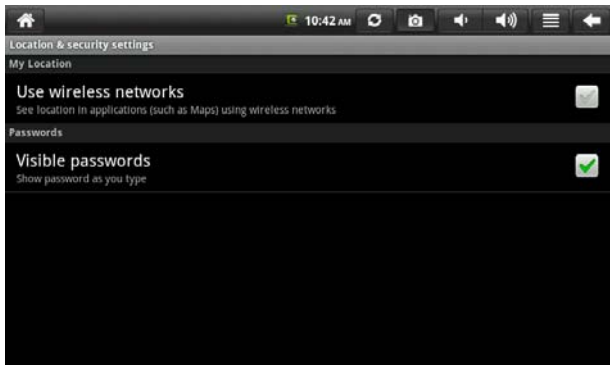

Passwords

To show password as you type, please press menu button - system settings - location & security - visible passwords.

9.5 Application

Unknown source

Enable "Unknown source" to allow user install the non-Android market application from the third party market or memory card.

Manage Applications

To manage and remove installed applications, press the menu button - system settings - applications - manage applications.

Running Services

 
To view and control the services currently running, press the menu button - system settings - applications - running services.

Development

To set development options of applications, press the menu button - system settings - applications - development.


9.6 SD Card & Device Storage

Check the available storage space:

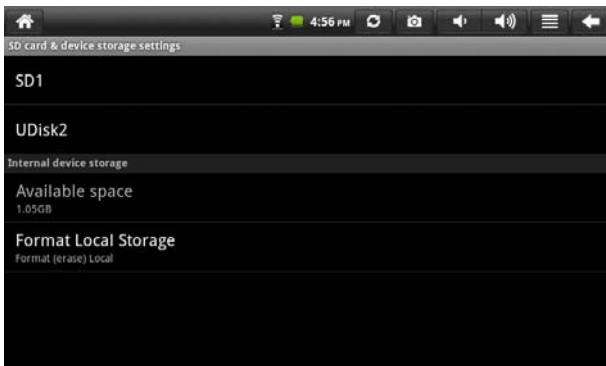

Storage Devices (SD card and USB flash disk)

 To check and operate the storage devices, such as unloading and so on, please enter menu - system settings -SD card and internal device storage. Select corresponding storage device under storage device directory, such as SD1. Total space and available space can be checked after entering storage device interface. Unmount operation also can be carried out. The interface showed as the following figure:

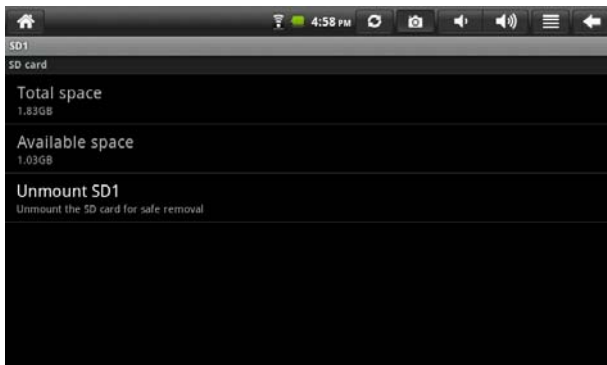

Device Storage

 
To check device storage, please enter menu - system settings - SD card & device storage. It can be checked under device storage directory.

Format Local Storage

If to format (clear) local storage, please press menu button - system settings - SD card & device storage - format local storage.

9.7 Language & Keyboard

Set language (language and region), text input and automatic correction options.

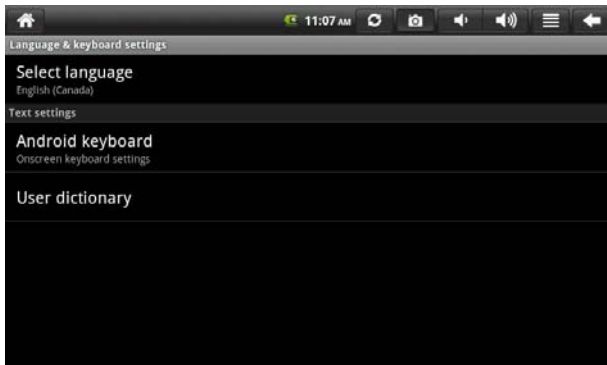

Select Language

To select language and region, please press menu button- system setting - language & keyboard – select language.

Android Keyboard

To carry out Android keyboard settings, please press menu button - system settings - language & keyboard - Android keyboard.

User Dictionary

To add words to user dictionary and delete words from user dictionary, please press menu button - system settings - language & keyboard – user dictionary.

9.8 Date & Time

To set date, time, time zone, 24-hour format and date format, please press menu button - system settings - date & time.

 


9.9 Screen Calibration

To calibrate the touch screen, press the menu button - system setting - touch screen calibration. Follow the prompts to do touch screen calibration. Appropriate prompt will appear for returning to the setting list after the calibration is completed.

9.10 About Device

To check legal information, device status and software versions.

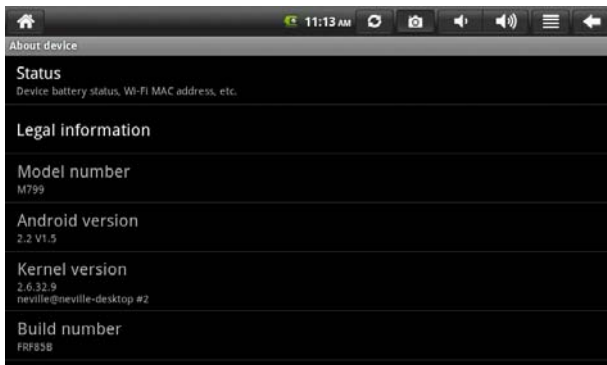

Status

To check battery status, battery power, boot time and Wi-Fi MAC address, please press menu button - system settings – about device - status.

Legal Information

To check related legal information, please press menu button - system settings - about device - legal information.

Model Number

To check model number, please press menu button - system settings - about device - model number.

Kernel Version

To check kernel version, please press menu button - system settings - about device - kernel version.

Build Number

To check build number, please press menu button - system settings - about device - build number.

10. The use of HDMI

Videos playing on the tablet computer can be switched to HDMI display equipments to play through HDMI cable (such TV sets with HDMI port). The maximum output resolution the tablet computer can support is 720p. The use method is showed as following:

1. Turn on the tablet computer.
2. Connect tablet computer to HDMI display device by HDMI cable. Turn on the display device and HDMI connection message will pop up on status bar of tablet computer.
3. Play video file on the tablet computer
4. Switch to tablet computer display through the following ways:
 - a) Automatically return to tablet computer display after completion of the video playback.
 - b) Directly pull out HDMI connecting wire in the process of video play and video can be switched back to tablet computer.
 - c) Press return key to exit video play in the process of video play and video will automatically switch back to tablet computer after exiting video playback.

11. Lock of Tablet Computer

Unlock screen/device:

Short press the power button to wake up the screen when the system enters sleeping mode.

Slide unlock icon upward to unlock and enter the interface before system enter the sleeping mode again.

 
12. Troubleshooting

12.1 Close Application


All applications having been opened will occupy memory in the device. Too many applications having been opened will influence the running speed of the device. Therefore, unused applications should be closed to reduce memory usage and keep the normal running speed of the device.



To close applications, please click the icon on the quick bar on desktop to enter system settings interface of system setup. Select applications - running services. The interface is showed as the following picture:

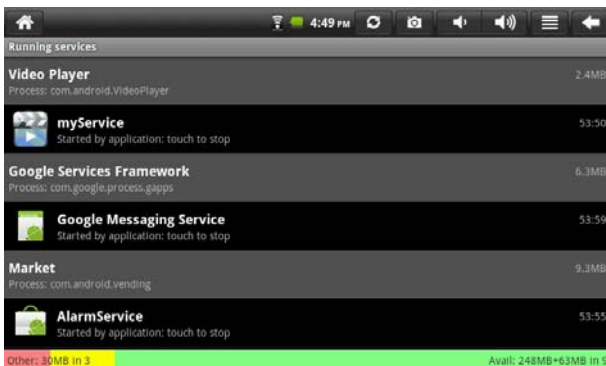

 Click the application needed to be closed and the following window will pop up.

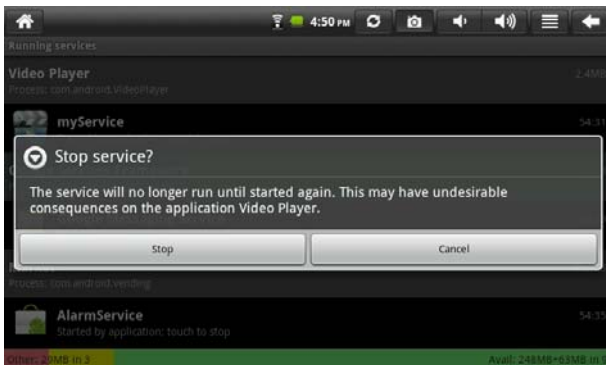

Click stop to close the application and the application will disappear in the windows being used.

12.2 Forced Shutdown

Long press the power key of the device for 7 seconds to force shut down the tablet computer.

12.3 Restore Defaults

To restore the device to original factory settings and clear all information, press the menu button - system settings - privacy right - restore factory settings.

WARNING After selecting to reset the device, all e-mail accounts, data and settings of system and downloaded applications will be completely deleted. Please cautiously use this function.

Umweltschutz



Seit 01.10.1998 dürfen alle verbrauchten Batterien NICHT mehr in den Hausmüll.

Die Batterien müssen zum Handel - also in die BATT-Boxen - oder zu den Sammelstellen der Kommunen zurückgebracht werden.

Bitte HELFEN SIE MIT, dass alle zugunsten unserer Umwelt mitmachen: Sprechen Sie Verwandte, Bekannte und Freunde an.

Bei weiteren Fragen oder auch, wenn der Händler um die Ecke keine BATT-Box hat, wenden Sie sich bitte an das

GRS INFOTELEFON: 01805 - 80 50 30

www.GRS-Batterien.de

Stiftung Gemeinsames Rücknahmesystem Batterien
Heidenkampsweg 44, 20097 Hamburg

Danke fürs Mitmachen!



JAY-tech GmbH

Krefelder Straße 657
D-41066 Mönchengladbach
Deutschland
www.jay-tech.de
info@jay-tech.de



05. 2012