

EASYPAD® 710

ENGLISH

User Manual



Congratulations for buying EasyPad 710!

Thank you very much for your trust and your decision to buy an EASYPIX product!

As we constantly update and improve EasyPad there may be small differences between the printed manual and your EasyPad in some cases. You have the option of downloading the current version of the manual and firmware updates for your EasyPad from our website www.easypix.eu.

EASYPAD®
for Android™ 

easypix®
Keep it real.

EASYPAD[®] 710

ENGLISH

Table of Contents

Safety instructions	3
Device overview	4
Description of the buttons	5
Language settings	6
Power monitoring	
and charging the batteries	7
Screen lock	7
Connecting with computer and data transfer	7
Functions of the buttons on the	
user interface	8
Programme menu	10
System settings	13
1. Wireless & Networks	13
2. Sound settings	14
3. Display settings	14
4. Location & safety	14
5. Application	15
6. Accounts & synchr.	15
7. Data protection	15
8. Memory	15
9. Language & keyboard	16
10. Date & time	16
11. Telephone info	16
Internet	17
Open Source Code & GNU General Public License	18
Technical Data	19

EASYPAD[®] 710

ENGLISH

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

 
F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display
– use only a dry cloth.

EASYPAD® 710

ENGLISH

Device overview

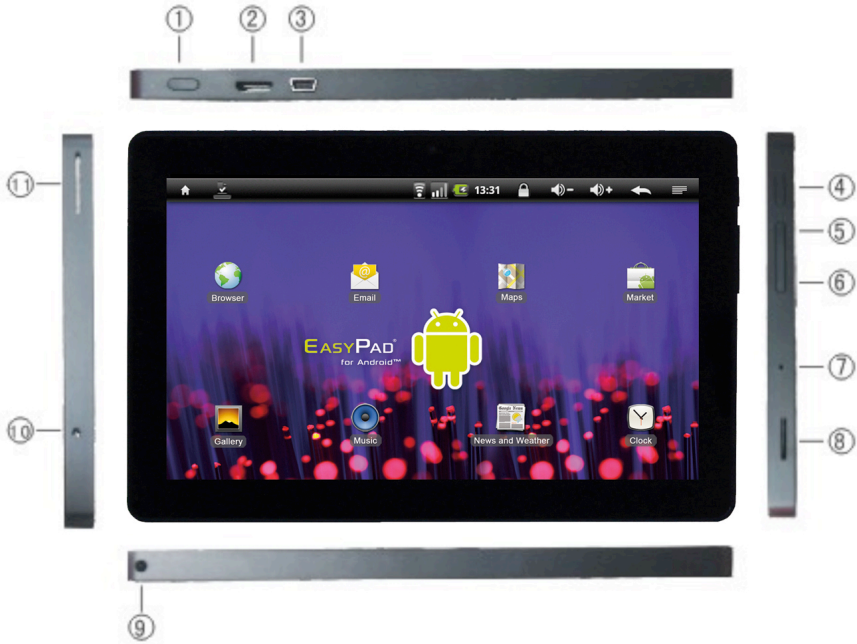

- | | |
|----------------------------|-------------|
| 1. Power Button | 10. DC-in |
| 2. HDMI Output | 11. Speaker |
| 3. USB&OTG Port | |
| 4. Menu Button | |
| 5. Home Button | |
| 6. ESC Button | |
| 7. Mic | |
| 8. Micro SD/SDHC Card Slot | |
| 9. Earphone Port | |

EASYPAD[®] 710

ENGLISH

Description of the buttons

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

Menu Button:

To open the context menu

Home Button:

To go back to the user interface

EASYPAD[®] 710

ENGLISH

Language setting

EasyPad 710 is delivered with English as a default language. To change the language setting, please do the following:

- Press on the programme menu symbol  on the right side of the screen.
- Select 'Settings' .
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

EASYPAD[®] 710

ENGLISH

Power monitoring and charging the batteries

The battery charge symbol  on the status bar indicates the charging status of the batteries.

If the power goes down, the device  shuts itself off automatically. If less power is shown, use the power adapter or a computer via USB to charge the device. 

The charging time for the battery is approximately four hours. 

Screen lock

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated. For locking the screen press the 'Lock' button in the specified direction.

Connecting to the computer and data transfer

EasyPad is equipped with a High-Speed USB2.0 Interface. After you connect the device to a computer, it appears in the status display .

Pull the status bar down and press 'USB Connection' to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from EasyPad!

EASYPAD® 710

ENGLISH

Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu.



Volume Buttons:

To increase or reduce the volume.



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



Change Window Button:

The device has five desktops. You can press this button or push your finger on the touchscreen to the side to navigate between different desktops.



WIFI / WLAN Signal Icon

 
EASYPAD® 710

ENGLISH



System instructions:

Pull the status bar down to view messages about new e-mails, downloaded documents, USB Connection Status or other information.

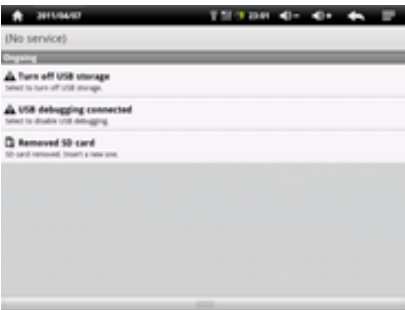

EASYPAD[®] 710

ENGLISH

Program menu



ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



Market:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



Internet browser



0.3MP camera



E-mail:

Program for retrieving, processing and sending e-mails.



G-mail:

Program for retrieving, processing and sending e-mails through Google account.



Google Talk:

Program to chat with other Google users.

EASYPAD® 710

ENGLISH



Google Maps:

Program for the display of maps or satellite images – Route planner.



YouTube:

Program for viewing YouTube videos.



Skype:

Program to chat with other Skype users or to make telephone calls via Internet.



Twitter:

Application for Microblogging – Facilitates the display of public diaries or create a public diary of your own.



Facebook:

Program for using the social network site Facebook.



Calendar:

Managing schedules – can be synchronised automatically with a Google account.



Pocket Calculator



Time:

Time display and setting alarm functions.



Settings:

Changing the basic settings of EasyPad.

EASYPAD® 710

ENGLISH



Sound Recorder:

Dictation Device Function.



Video Player



Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



Shelves:

A program for reading and managing e-books.



Raging Thunder: Car racing game

Krazy Kart Racing: Car racing game



Angry Birds Rio: Game of skill



Fruit Ninja: Game of skill

EASYPAD® 710

 
ENGLISH

System settings

Touch the icon for the settings  to open the system settings menu:

1. Wireless & Networks

Touch 'Wireless & Networks'.

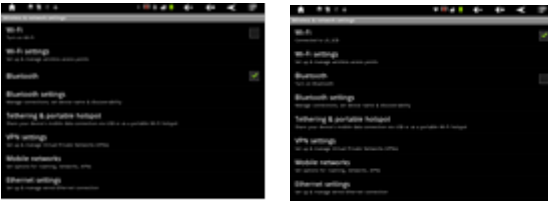

WLAN: Touch  =>  to switch on the WLAN function.
The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.

If needed you will be requested to enter your WLAN password:



EASYPAD® 710

ENGLISH

Advanced WLAN / Wi-Fi settings:

Touch  in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

2. Sound settings

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

3. Display settings

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after : 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

4. Location & safety

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your EasyPad.

EASYPAD[®] 710

ENGLISH

5. Application

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

6. Accounts & synchr.

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

7. Data protection

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings.

All settings, self-installed apps and data stored on internal memory can be deleted.

8. Memory

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

EASYPAD[®] 710

ENGLISH

9. Language and keyboard

Set the system language and input method.

10. Date and time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

11. Telephone info

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

EASYPAD® 710

ENGLISH

Main functions

Internet

 
Touch  Icon to surf the net.
Google is the default start page.
Touch the input field to display the keyboard:



Touch  after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;
Touch  and the menu will be displayed as follows:



EASYPAD[®] 710

ENGLISH



Touch 'New Window' and a new website will be displayed.



'Most visited' and 'History' can be found under 'Bookmarks'.



Click to navigate between two open windows.
Four different windows are possible simultaneously.



Touch 'Refresh' to refresh the current web page.



A step forward, opposite of Back Icon.



'Add bookmarks', 'Search on the page', 'Select text' 'Page information', 'Page info', 'Forward link' 'Downloads', 'Settings'.

Open Source Code:

http://www.easypix.info/download/easypad710/open_source.zip

GNU General Public License:

<http://www.gnu.org/licenses/gpl-2.0.html>

EASYPAD® 710

ENGLISH

Technical Data

EasyPad 710	7" / 17.8cm Tablet-PC
CPU	Rockchip 2918 1.2 GHz
Operating System	Android 2.3 – Gingerbread
RAM	512MB DDR3
Internal Memory	4GB NAND Flash
Memory Expansion	Micro SD/SDHC up to 32GB
Display	16:9 Resistive 2-point Multi-Touch-Display
Resolution	800 x 480 Pixel
G-SENSOR	MMA8452Q
Camera	0.3MP
Battery	3100MAH, 5V, 2A rechargeable Li-ion Battery
MIC	Yes
	Internet & Skype Phone-Function
WIFI	802.11b/g/n (high sensitivity)
I/O ports	1x DC In, 1x headphone, 1x TF Card-Slot, 1x USB 2.0, host&OTG
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P, YouTube, 720P, HTML5, Flash 10.1 / 10.2/10.3
Office	Word / Excel / PDF / PPT, Microsoft Wordpad, Microsoft SpreadExcel The software is not on the device and must be downloaded by the user.
Images	JPG, BMP, PNG etc.

EASYPAD[®] 710

ENGLISH

rk29sdk_gpl_kernel_20110702

Copyright © Rockchips

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License, version 2, as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License, version 2, for more details.

You should have received a copy of the GNU General Public License, version 2, along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110, USA

You should receive a complete machine-readable copy of the corresponding source code of this program under the following

link: http://www.easypix.eu/download_easypad.html

if not, write to Easypix, Corinne Loose, Em Parkveedel 11, D-50733 Cologne, Germany, e-mail: support@easypix.eu