

# SMARTPAD® EP750

ENGLISH

## User Manual



Congratulations for buying SmartPad EP750!

Thank you very much for your trust and your decision to buy an EASYPIX product!

As we constantly update and improve SmartPad there may be small differences between the printed manual and your SmartPad in some cases. You have the option of downloading the current version of the manual and firmware updates for your SmartPad from our website [www.easypix.eu](http://www.easypix.eu).

**SMARTPAD®**  
for Android™ 

**easypix®**  
Keep it real.

# SMARTPAD® EP750

ENGLISH

## Table of Contents

Safety instructions	3
Device overview	4
Description of the buttons	5
Language settings	6
Power monitoring	
and charging the batteries	7
Screen lock	7
Connecting with computer and data transfer	7
Functions of the buttons on the	
user interface	8
Programme menu	9
System settings	11
WiFi	11
Sound	13
Display	13
Storage	13
Apps	13
Accounts & sync	13
Location services	14
Security	14
Language & input	14
Backup & reset	14
Date & time	14
About tablet	14
Internet	15
Open Source Code & GNU General Public License	17
Technical Data	18

# SMARTPAD® EP750

ENGLISH

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

**A** Please keep the device away from places with high temperatures, high humidity or dust.

**B** In particular please avoid leaving the device in the car during summer if the doors are closed.

**C** Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

**D** The Standby Time of the batteries may vary due to different environmental influences.

**E** We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

**F** Do not open the housing of the device. Doing this will void your warranty claims.

**G** Do not use alcohol, thinners or petrol to clean the display  
– use only a dry cloth.

# SMARTPAD® EP750

ENGLISH

## Device overview



- |                 |                        |
|-----------------|------------------------|
| 1. Camera       | 10. DC-in              |
| 2. ESC Button   | 11. Micro SD Card Slot |
| 3. Home button  | 12. Speakers           |
| 4. Menu button  |                        |
| 5. Power button |                        |
| 6. Mic          |                        |
| 7. Earphone     |                        |
| 8. Reset        |                        |
| 9. USB Port     |                        |

# SMARTPAD® EP750

ENGLISH

## **Description of the buttons**

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

Menu Button:

To open the context menu

Home Button:

To go back to the user interface

# SMARTPAD® EP750

ENGLISH

 
## Language setting

SmartPad EP750 is delivered with English as a default language. To change the language setting, please do the following:

- Press on the programme menu symbol on the right side of the screen



- Select 'Settings'
- Scroll to the end of the list
- Select 'Language & input'
- Select 'Language'
- Type your preferred language
- Press the 'Home' button to return to the home screen



# SMARTPAD® EP750

ENGLISH

## Power monitoring and charging the batteries

The battery charge symbol  in on the status bar indicates the charging status of the batteries.

If the power goes down, the device shuts itself off automatically.

If less power is shown, use the power adapter to charge the device.

The charging time for the battery is approximately four hours.

## Screen lock

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated.

For locking the screen press the 'Lock' button in the specified direction.

## Connecting to the computer and data transfer

SmartPad is equipped with a High-Speed USB2.0 Interface.

After you connect the device to a computer, it appears in the status display



# SMARTPAD® EP750

ENGLISH

## Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu (not in all apps available).



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



WI-FI Signal Icon



System instruction (example)



# SMARTPAD® EP750

ENGLISH

## Program menu



### ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



### Market / Play Store:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



### Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



### Internet browser



### 0.3MP camera



### E-mail:

Program for retrieving, processing and sending e-mails.



### Google Mail:

Program for retrieving, processing and sending e-mails through Google account.



### Google Maps:

Program for the display of maps or satellite images – route planner.

# SMARTPAD® EP750

ENGLISH



## Calendar:

Managing schedules – can be synchronised automatically with a Google account.



## Pocket Calculator



## Time:

Time display and setting alarm functions.



## Settings:

Changing the basic settings of SmartPad.



## Sound Recorder:

Dictation Device Function.



## Video Player



## Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



## E-Book:

A program for reading and managing e-books.

# SMARTPAD® EP750

ENGLISH

 
## System settings



Touch the icon for the settings menu: to open the system settings menu:

## Wi-Fi

Touch 'Wi-Fi'.

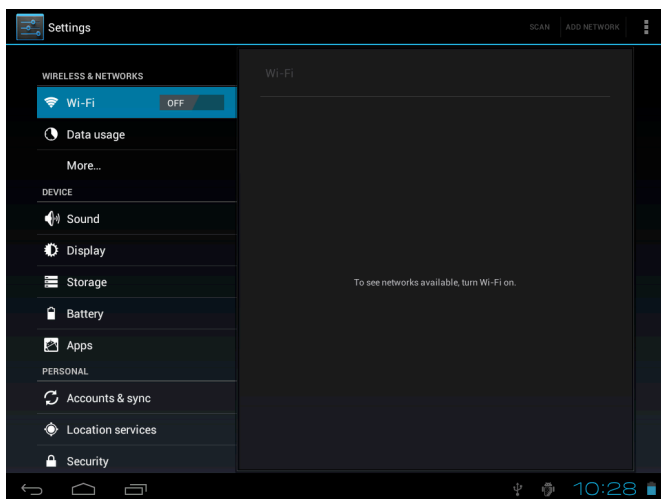

WI-FI: Touch  =>  to switch on the WI-FI function.


The device automatically searches for available WI-FI networks.

# SMARTPAD® EP750

 
ENGLISH

WI-FI Settings: Select your network here.

If needed you will be requested to enter your WI-FI password:

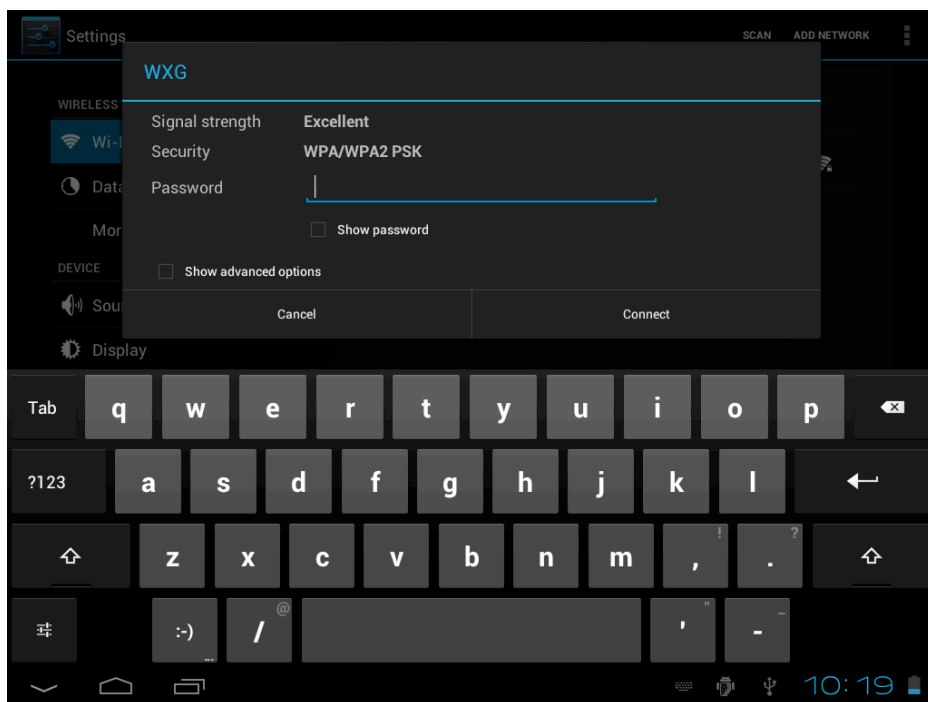

Advanced Wi-Fi settings:

Touch  in the menu for Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

# SMARTPAD<sup>®</sup> EP750

ENGLISH

## **Sound**

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

## **Display**

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after : 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

## **Storage**

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

## **Apps**

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

## **Accounts & sync**

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

# SMARTPAD® EP750

ENGLISH

## **Location services**

Here you can activate the automatic recognition of the location.

## **Security**

You can also set security passwords which will prevent unauthorised access to your SmartPad.

## **Language & input**

Set the system language and input method.

## **Backup & reset**

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings. All settings, self-installed apps and data stored on internal memory can be deleted.

## **Date & time**

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

## **About tablet**

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

 
# SMARTPAD® EP750

ENGLISH


## Main functions

### Internet



Touch  Icon to surf the net.  
Easypix.eu is the default start page.  
Touch the input field to display the keyboard.




Touch  after entering a website address  
to open the website.


**Note:** The Android keyboard has few options for settings such as:  
keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously.

# SMARTPAD<sup>®</sup> EP750

 ENGLISH

Touch  and the menu will be displayed as follows:

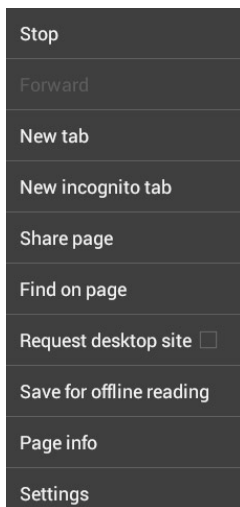



# SMARTPAD<sup>®</sup> EP750

ENGLISH

Open Source Code:

[http://www.easypix.info/download/smartpad\\_ep750/open\\_source.zip](http://www.easypix.info/download/smartpad_ep750/open_source.zip)

GNU General Public License:

<http://www.gnu.org/licenses/gpl-2.0.html>

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).

# SMARTPAD® EP750

ENGLISH

## Technical Data

SmartPad EP750	7" / 17.7cm tablet-PC
CPU	1GHz Rk2906 ARM Cortex A8
Operating System	Android 4.0 – Ice Cream Sandwich
RAM	512MB DDR3
Internal Memory	4GB NAND Flash
Memory Expansion	Micro SD cards up to 32GB
Display	16:9 Capacitive 5-point Multi-Touch-Display
Resolution	800 x 480 Pixel
G-SENSOR	Yes
Camera	0.3MP
Battery	3.000mAh, 3.7V, 5V/2A rechargeable Li-ion Battery
MIC	Yes
WIFI	802.11b/g/n
I/O ports	1x DC In, 1x headphone, 1x Card-Slot, 1x USB 2.0
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P, YouTube, 720P, HTML5, Flash 11
Office	Word / Excel / PDF / PPT, Microsoft Wordpad, Microsoft SpreadExcel The software is not on the device and must be downloaded by the user.
Images	JPG, BMP, PNG etc.

# SMARTPAD<sup>®</sup> EP750

ENGLISH

**rk29sdk\_gpl\_kernel\_20110702**

**Copyright © Rockchips**

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License, version 2, as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License, version 2, for more details.

You should have received a copy of the GNU General Public License, version 2, along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110, USA

You should receive a complete machine-readable copy of the corresponding source code of this program under the following

link: [http://www.easypix.eu/download\\_easypad.html](http://www.easypix.eu/download_easypad.html)

if not, write to Easypix, Corinne Loose, Em Parkveedel 11, D-50733 Cologne, Germany, e-mail: [support@easypix.eu](mailto:support@easypix.eu)

# SMARTPAD® EP750

ENGLISH

**Easypix hereby declares that the product SmartPad EP750 is in conformity to all the essential requirements of Directive 1999/5/EC.**

**The declaration of conformity can be downloaded here:**

**[http://www.easypix.info/download/smartpad\\_ep750/konformitaetserklaerung/](http://www.easypix.info/download/smartpad_ep750/konformitaetserklaerung/)**

**Easypix hereby declares that the product battery charger for the SmartPad EP750 is in conformity to all the essential requirements of Directive 1999/5/EC.**

**The declaration of conformity can be downloaded here:**

**[http://www.easypix.info/download/smartpad\\_ep750/konformitaetserklaerung/](http://www.easypix.info/download/smartpad_ep750/konformitaetserklaerung/)**

